

# INSPECTION & MAINTENANCE

Ref No CLCIM.

## SCHEDULE

Iss No 01.

for

### Little City

This Equipment should be maintained in accordance with the requirements of BSEN 1176-7: Playground Equipment: Part 7: Guidance on installation, inspection, maintenance and operation.  
The frequency and level of inspection will depend on the location, degree of use, and the likelihood of vandalism. However, assuming normal usage, we recommend the frequency of inspection to be at a minimum as follows:

- 1] A Weekly Visual Routine Inspection. NOTE: For playgrounds subject to heavy use or vandalism a Daily Routine Visual Inspection may be required.
- 2] A Three Monthly Operational Inspection.
- 3] An Annual Main Inspection by a specialist.

#### 1] Weekly/Daily Routine Visual Inspection.

A weekly/daily visual inspection is recommended, the following checks should be made as a minimum:-

- a/ Check all steelwork is secure.
- b/ Check all fixings are in place and not loosening.
- c/ Check all components for any protrusions or sharp edges.
- d/ Check all ropework and connections for damage.
- e/ Check slides are secure and sliding surface is free from obstruction.
- f/ Check surfacing/area around unit for any debris or sharp objects.

#### 2] Three Monthly Operational Inspection.

At intervals of three months a more detailed inspection should be made and the results entered in a permanent record and filed for future reference. (Copies of this form can be made and completed for this record).  
In addition to the checks made during the weekly/daily visual inspection, particular attention should be paid to the effects wear and vandalism, all of which may be particular to individual locations.

The following checks should be made as a minimum:-

Inspected By: \_\_\_\_\_ Date: \_\_\_/\_\_\_/\_\_\_ Check ✓

- a/ Inspect all steelwork for damage and excessive wear.
- b/ Inspect all panels for damage and excessive wear.
- c/ Inspect all ropework and connections for damage or excessive wear.
- d/ Inspect all fixings and connections for damage, excessive wear, or loosening.
- e/ Inspect slide to ensure slide is secure and sliding surface is free from obstruction.
- f/ Inspect all chains and connections for damage or excessive wear.
- g/ Check foundations are secure and not cracked.
- h/ Inspect all components for any protrusions or sharp edges.

NOTE: We recommend that any chains with end links or eyebolts with wear exceeding 30% be replaced.

NOTE: If any defect is found it should be rectified as soon as possible or, if necessary, the equipment should be secured against use until remedial action is taken.

3] **Annual Main Inspection.**

At intervals not exceeding 12 months a detailed inspection should be carried out by a specialist. The inspection should include all points covered in the Operational Inspection as a minimum. The inspection should be recorded in a permanent record and the inspection report be filed for future reference.

**Maintenance**

Any worn or damaged parts should be replaced with PLAYDALE authorised components. We DO NOT recommend the use of homemade parts.

Refer to the Installation Instructions for identification of parts.

All replacement components should be fitted as shown in the Installation Instructions.

- 1/ Bolted joints should be tightened when necessary. The Security socket (supplied with equipment) will be needed for tightening security fixings.
- 2/ If necessary the floor grips inserts can be replaced by removing the floor.
- 3/ If necessary the unit should be cleaned and any broken glass or other debris be removed.
- 4/ If necessary any painted steelwork can be repainted using suitable paint complying with the Toys (Safety) regulations.